
Table of Contents

Table of Contents i

Specifications 1

- Illustrations & Data for All VMC Models 1
 - VMC TRM 3
 - VMC EMC 5
 - VMC 15/15XT 7
 - VMC 2216 10
 - VMC 3016 12
 - VMC 2016L 14
 - VMC 3016L 16
 - VMC 4020 18
 - VMC 4020A 20
 - VMC 5020A 22
 - VMC 6030 24
 - VMC 8030 27
 - VMC 3020 29
 - VMC 4525 31
 - VMC 6535 33
- Fadal Bolt Torque Specifications 35
- Table & T-Slot Dimensions 36
 - TRM Table 36
 - EMC, 15 & 2016L Table 37
 - 2216 & 3016 Table 37
 - EMC, 15XT & 3016L Table 38
 - EMC, 15, 15XT, 2216, 3016, 2016L & 3016L T-Slots 38
 - 3020, 4525 Table & T-Slots 39
 - 4020 Table 39
 - 4020A & 5020A Table 40
 - 6030 Table 40
 - 8030 Table 41
 - 6535 Table 41
 - TRM T-Slots 42
 - 4020, 4020A, 5020A, 6030 & 8030 T-Slots 43
 - 3020, 4525, 6535 T-Slots 43
- Recommended Mainline Fuses / Circuit Breakers 44

Pre-Installation Procedures	45
Foundation	45
Shipping Dimensions	47
Positioning	48
Air Supply	49
Electrical Grounding	50
Primary Grounding	51
Supplemental Grounding	51
Checking Grounding Integrity of Fadal VMCs	52
Specification -Grounding for the Fadal machine:	52
Inspection - Check ground wire coming into VMC:	53
Verification - Check grounding integrity with Fluke meter:	53
Electrical Service	54
Installation Procedures	57
Machine Installation & Hook-Up	57
Unpacking	57
Unlocking Front Doors with CE Door Locks	57
Moving the VMC: Fork Lift	58
Moving the VMC: Crane	59
Placing the VMC	60
Air Supply	62
Power Check	62
Transformer Tapping	70
Single Phase Input Power	71
Phase Converter Rotary	72
Transformer Sensor	72
Leveling	73
For All VMCs	73
Box Way VMCs	73
Linear Way VMCs	74
Hold Down Clamps	78
Machine Maintenance	79
Scheduled Maintenance	79
Maintenance & Lubrication Schedule	79
EMC & TRM Lubrication of the ballscrews	80
TRM Lubrication of the Ways	80
Lubrication of the Ways	81
Cooling Fans	82
Spindle & Ballscrew Cooling System	83
Pump Filter	83
Tank Reservoir	83
Fuses, Heaters, & Relays	85

- Fluids 85
- Auger 85
- Dual Arm Tool Changer 87
- Scheduled Maintenance 88
- for Dual Arm Tool Changer 88
- Calibration of VMCs using the Renishaw laser 89
- Scope 89
- Reference Documentation 89
- Materials and Equipment 89
- Safety and Environmental 89
- Definitions 89
- Responsibilities 89
- Procedure 89
- Standard Fadal Cnc88hs 90
- Documentation 90
- Calibration Requirements and Limits 91
- Laser Setup 91
- Aligning the laser 93
- Download Survey 94
- Axis Calibration 94
- Sample output from a laser measurement system. 96
- Laser Shut Down 98
- Pallet Changer/Hydro Sweep™ 99
- HydroSweep™ Only 101
- Tests for CE Safeguards on Fadal Machines 103
- Zero-Out Memory 110
- Procedure 110
- Zero-Out Memory 112
- Settings 112

Automatic Tool Changers 113

- Operation 113
- Programming 113
- Electrical Operation 113
- Tool Change Sequence 115
- ATC Sensors & Switch 116
- ATC Fault Messages 116
- Servo Turret Controller and Amplifier Boards (PCB-0108) 119
- Adjustments 120
- Z Axis Cold Start Adjustment 120
- Spring Configuration 16, 21 & 30 Tool Changers 122
- ATC Turret Slide Adjustment 122
- Tool Turret Rotational Adjustment 124
- ATC Slide Belt Replacement & Adjustment 125

ATC Motor Replacement Procedure	126
Replacing the Turret Motor on a Geneva Wheel ATC	126
Replacing the Turret Motor on a Servo Turret ATC	127
Replacing the Slide Motor	127
Turret Factor Setting	128
Pulley Alignment	128
Dual Arm Tool Changer	130
Tool Changer Specifications	130
Sub-Assemblies	131
Installation & Testing	135
Software & Mechanical Test	140
Set-Up	141
Tool Loading Procedures	143
Operation	143
Sys 101.4 Software Update.	145
Troubleshooting	146
Errors	147
Scheduled Maintenance	156
50 Taper Dual Arm Tool Changer	157
Tool Changer Specifications	157
Sub-Assemblies	158
Installation	162
Installation Notice	163
Troubleshooting	164
Maintenance	167
Dual Arm Tool Changer - Arm Installation	167
Sending the Tool Changer Spindle to Home Position	167
Inserting the Arm Assembly	168
Dual Arm Tool Changer Alignment	169
Entering the Dual Arm Tool Changer Menu	169
PCB-0213 Dual Arm ATC Controller Card	173
Description and Explanation of Operation of PCB-0213 (1330-0A)	173
Inputs	173
Outputs	174
LED Indicators	174
Currents	175
Functional Explanations	175
Sequence of Dual Arm-ATC Operation When Used With The Fadal Control	177
Feedback	177
Part Numbers	177
DA-ATC Tool Change Cycle—Fadal Control	178
Changing tools on a TRM	183
50 Taper Pull Stud Specs (CAT/BT)	184

Axis Drive Systems 185

- Axis Drive Systems 185
 - Amplifier Chassis Operation 185
 - Troubleshooting the Amplifier Chassis 186
 - Solid State Relay 186
 - Bridge Rectifier 186
 - AC Brushless Chassis Diagram 188
- Amplifiers 190
- DC Axis Drive Systems 191
 - Note: 191
 - DC Amplifier Adjustment 191
 - Axis Software Version AC0017-5 for AC Drive VMCs 192
 - Procedure for Setting Loop Gain 192
 - Setting Cold Start Position 194
 - Replacing A Servo Amplifier 194
 - Setting Gain For The 1010-5 195
 - Verify The Gain Setting In The SV 195
 - Troubleshooting DC Amplifiers 196
- AC Drive Systems 196
 - Information and Connections 196
 - Physical Layout 197
 - Amplifier Power Connectors 199
 - Features 201
 - AC Axis Adjustments 201
 - Axis Card Adjustments 202
 - Troubleshooting AC Amplifiers 203
- SV Command 203
 - Using SV 203
 - Review or Change Survey 204
 - Determining the Zero Offset 204
 - Changing the Zero Offset 205
 - Changing Gain 206
 - Saving a Survey to the Axis Control Card 206
 - Copying a Survey To A New Axis Control Card 206
- Axis Motors (XYZ) 207
 - Motor Wiring 207
 - Resolvers 208
- EMC and TRM Way Lubrication 210
- Axis & Way Systems 211
 - Waylube System 211
 - Operation 211
- PDI Waylube Troubleshooting Observations and Tests 212
- Air Valve Operation 212
- Pump Operation 213

Waylube Pump 214

Cool Power – Ballscrew / Spindle Cooling System 217

 Electrical Operation 217

 Older Controller Boards 219

 Coolant flow paths 219

Motor Couplers 221

Gib Adjustment 224

 Table Gib/Strap Assembly 226

 Saddle Gibs 227

 Saddle Gib/Strap Assembly 228

 Head Gibs 229

 Head Gib/Strap Assembly 230

 Top Gibs 230

 Bottom Gibs 231

 6535/4525/3020 Gib & Strap Adjustments 232

 Table Gibs 233

 Table Gib/Strap Assembly 234

 Saddle Gibs 234

 Head Gibs 237

 Head Gib/Strap 238

 Top Gib/Strap 238

 Bottom Gib/Strap 238

SQUARENESS TEST: (Measures Squareness from X to Y) 239

 Installing VMC Linear Way Saddle 240

Procedure for Correcting the Saddle Squareness 241

Procedure for Correcting the Table Squareness 241

Axis Limit Stops 242

 TRM & EMC 242

 Mechanical 242

Backlash 243

 Entering Backlash Values 244

 Determining Proper Backlash Values 244

CNC Controls247

Fadal’s Block Diagram 247

Electrostatic Discharge (ESD) 248

Functional Description 248

 Boards in Motherboard or Backplane 248

 Slot 1 to 4 248

 Slot 5 249

 Slot 6 250

 Slot 7 250

 Slot 8 250

 Slot 9 250

- Slot 10 250
- Slot 11 250
- Slot 12 250
- Slot 13 250
- Axis Controller Boards 251
- J14 252
- Slot 14 252
- Slot 15 253
- Slot 16 253
- Slot 17 253
- Boards Outside the Motherboard 253
- DC Power Supply 254
- Door Interlock Monitor Board 2000-1B (PCB-0196) 254
 - Terminals 254
 - Inputs 254
 - Outputs 254
 - Power 254
 - Operation 254
 - Indicators (LEDs) 255
- Emergency Stop Circuit Overview 255
 - Basic Hardware Operation Description: Normal Operation (No Fault) 255
 - Fault Condition 256
 - Basic Software Operational Description 256
 - Troubleshooting Tips 257
 - Emergency Stop and Fault Circuit 258
 - Emergency Stop Circuitry 259
 - Fadal Axis Board Jumper 260
 - Axis Controller 1010-6 261
- 1460-1 Memory Expansion Boards 262
- Master Feedrate 262
- Feedrate Potentiometer (Pot) Adjustment 263
- Zero Out Memory Procedure 264
 - Zero-out Memory 266
 - PCBA Compatibility Chart 267

Spindle Drive Systems 269

- Spindle Drives 269
- Inverter/Vector Drives 269
 - Inverter/Vector Drive Inputs & Outputs 270
- Adjustments 274
 - Adjusting the Baldor Vector Drives 274
 - Auto Tuning/ Zero Balance 274
 - Baldor Spindle Drive Parameter Usage for Fadal VMC 275
 - Terms and Procedures: 275

Yaskawa Drive 515 (INV-0072)	282
Set up Instruction, Initializing and balancing the drives	282
Yaskawa V7 (INV-0071) on Fadal EMC Spindle setup Instructions	283
Setting Access level for parameters	283
Displaying Fault Sequence	283
Adjusting zero point on Analog velocity input	283
Regenerative Resistors	284
Adjusting the AMC Vector Drive	286
Rigid Tapping (Optional Feature)	291
Fadal Rigid Tapping Procedure	291
Software Version AC-0017 and Later	292
Before AC-0017 Software Version	293
Motors	294
7.5 HP Motor	294
10 HP Motor	294
15 HP Motor	294
20 HP Motor	294
35 HP Motor	294
(50 HP Drive)	294
WYE / DELTA Motors	295
Belt Drive Systems	296
Posi-Drive Belt System	296
Motor Plate Tensioner Cable	300
Hydraulic Hi/low System	301
7,500 RPM Poly Chain Belt	302
Tools Sticking in the Spindle During a Change Cycle	307
1. Air Supply Pressure	307
2. Drawbar Cylinder Hall Effects Switch	308
3. Insufficient Air Volume: MAC In-Line Valve	308
4. Air Leaks; Exhaust Valve	308
5. Air Leaks; Exhaust Valve Nipple	308
6. Air Leaks; Drawbar Cylinder Bushing	308
7. Air Leaks; Drawbar Cylinder Plate	308
8. Air Leaks; Hydraulic Actuator Assembly Bolts	309
9. Air Leaks; Coolant-Thru Drawbar Cylinder	309
10. Orientation Bridge "Lifting"	309
11. Black Oxide Tool Holders	309
12. Dirty Tool Holders	309
13. Spring Pilot; Oversized Diameter	309
14. Spring Pilot; Ball Pockets Incorrect	310
15. Drawbar Scored	310
16. Damaged Drawbar	310
17. Damaged Floater	310
18. Testing Procedure	310
MEASURING DRAWBAR PERFORMANCE	311

- DRB-0024 Sticking Tools Kit, 10K LDB 312
- DRB-0025 Sticking Tools Kit, 10K LDB-CT= 312
- Tap-Tap Cycle 313
- Spindle Drawbar and Belleville Spring Replacement 314
 - Drawbar Removal 314
 - Replace Belleville Springs 315
 - Remove Floater (This will rarely be necessary.) 315
- Spindle Belleville Springs Quantity Chart 316
- Spindle Pre-Load 317
 - Measuring the Spindle Pre-Load 317
- Spindle Duty Cycle 317
- Air Positive Flow System 318
- Spindles 319
 - 7.5K & 10K Grease Packed Spindles 319
 - 15K Air/Oil Spindle 319
 - Spindle/Lube Pump/Control 320
 - Component Installation 321
 - Spindle Tram 323
 - Adjusting Spindle Tram 324
- 15K Air/Oil Spindle Installation 324
 - Wiring Harness Installation 326
 - Plumbing Spindle 327
 - Install Component Plumbing 328
- Coolant Thru the Spindle 331
 - Electrical 331
 - Mechanical 331
 - Coolant-Thru Spindle Seal Kit Instructions 331
 - Determining the Leak Location 332
 - Hydraulic Actuator Set-up 334
- 40 Taper BT & CAT Pull Studs 335

Attached Optional Devices 337

- M-Function Board Use and Setup 337
 - Miscellaneous Functions (M-Codes) 337
 - Fadal M Functions 338
 - Fadal Normally Supplied M-Functions 339
 - Fadal Optional M-Functions 339
 - 1050-3A M-Function PCBA (PCB-0008) - Two M Functions. 339
 - U7 (Dip Switch) 340
 - Reset Options 340
 - M-Function Contacts 341
 - M-Function Hook-up 341
- Remote Manual Pulse Generator 342
 - Installation Procedure 343

Dynamic Tool Load Compensation 344
 Servo Coolant Assembly 345
 Servo Coolant Control 346
 Troubleshooting Checklist 347
 CNC 88 HS Optional Diskette Drive 348
 CNC88HS Optional Diskette Drive- Miscellaneous 350
 Specifications 350
 Requirements 350
 Access from Control 350
 Access from Program Using Macro Statement #DISK 351
 Macro Statement Format 351
 Restrictions on File Content and Format 351
 Restrictions on User Defined Subroutines 352
 Subprograms and Fixed Subroutines ARE Allowed 352
 Diskette Drive Error Codes 352

Rotary Tables353

Rotary Tables, 4th Axis 353
 Pre-installation 353
 Remove the Rotary Table from the Shipping Crate: 354
 Installation 354
 Squaring the 354
 VH-65 354
 Connecting the VH-65 Motor Cable 354
 Horizontal Installation Difference(s) 355
 Installing the Servo Control 355
 Setting the VMC Parameters 356
 Balancing the Amplifier 356
 Evaluating the Following Error 357
 Setting the Voltage 357
 Setting Backlash at the Control 357
 Setting the VH-65 Worm Gear Backlash 358
 Verifying Air Brake Engagement 363
 Adjusting the Cold Start 363
 Maintenance 364
 Rotary Set-Up 365
 FADAL VH-65 & VH-5C 366
 FADAL V-300 (V-400) Rotary Table 367
 Troyke NC-10 368
 Technara MD-200R 369
 Technara MD-300R 370
 Tsudakoma RNCV-401 371
 FADAL RT-175 372
 FADAL RT-225 373

- FADAL RT-275 374
- Tilting Rotary Tables, 4th & 5th Axis 375
 - FADAL TR-65 375
 - A & B Axis Position Loop Gain (1010-5) 377
- Hydraulic Brakes 379
 - 4th Axis Brake Installation 379
 - 4th Axis Brake Check-Out 380
 - 4th, 5th Axis Brake Installation 380
 - 4th, 5th Axis Brake Check-Out 381
- Probes & Scales 383**
 - Probes 383
 - MP-11 Probe 383
 - MP-12 Probe 384
 - TS-27 384
 - Scales 385
 - Installing Scales 385
 - 1580 Board Setup 426
 - Scale Box Installation / Side Mount 428
 - Scale Box Installation / Top Mount 433
 - Heidenhain Tester 440
- Pallet Changer 443**
 - Installation of Pallet Changer 443
 - Installation of Light Curtain 448
 - Mirror Alignment 449
 - Setting the Sensor on the 1840 Board 450
 - Purpose 450
 - Operation 451
 - Pallets 451
 - M-Functions 451
 - Manual Operation 452
 - Maintenance Schedule 456
- Chip Removal Devices 459**
 - HydroSweep™ 459
 - Maintenance Schedule 459
 - Auger, Chip Removal System 461
 - PCB-0197 Auger Control & Door Interlock Monitor Board 1310-OC 461
 - Daily and Weekly Safety Tests for Door Monitor 464
 - Chip Conveyor 465
 - Installation Procedure 465
 - Chip Conveyor Power and Controls 467

Pre-Startup Safety Inspection	468
Stopping the Chip Conveyor on US and CE Machines	468
Restarting the Chip Conveyor	468
Observance and Inspection	469
Cause of Trouble and Corrective Action	470
Maintenance Schedule Chip Conveyor	471

General Information473

Helpful Formulas	473
Temperature	473
Conversion Factors	473
Electrical References	473
Expansion Coefficients	473
Fadal Machining Centers Serial Numbers	474
Communications Troubleshooting	475
Environment	475
File	475
VMC	476
Cables	478
Computer and Computer IO Port	479
Software	480
Thermal Expansion	482
Overview	482
Recognizing Thermal Expansion	482
Accuracy and Repeatability	482
Expansion Coefficients	483
Heat Sources	483
Friction	483
Ambient Temperature	484
Machining Practices	484
Non-Uniform Expansion	485
Material Differences	485
Fixtures / Sub Plates	485
Machine Assemblies	485
Solving the Thermal Expansion Problem	486
General Considerations	486
Ambient Sources	487
Sunlight	487
Cooling Systems	487
Radiant Heat	487
Binary Numbers	487
Number Systems	487
Binary Number Groupings	489
Reading Status Group	489

- VMC Maintenance 490
 - Cabinet Fans 490
 - Lubrication 490
 - Machining Practices 490
 - Warm Up 490
 - Rough Cut / Cool Down / Finish Cut 491
 - Monitoring Position Changes 491
 - Coolant 491
 - VMC Options 491
 - Probe 492
 - Glass Scales 492
 - Coolant Through Spindle 492
 - Cooled Ball Screws and Spindle 492
 - Conclusion 493

- Diagnostics 495**
 - Diagnostic System Commands 495
 - DS - Display Switches 495
 - Menu Diagnostics 498
 - Menu Page 1 498
 - Menu Page 2 500
 - Menu Page 3 500
 - Menu Page 4 501
 - Menu Page 5 501
 - Clamp-on Ammeter Testing 502
 - Tooling Required: ExTech AC/DC Clamp-On Ammeter 502
 - Gib and Gib Strap Verification 502
 - Ballscrew Alignment 503
 - Limit Stop Check 503
 - Test Cut Procedure 504
 - VMC Test Cut 506
 - VMC Test Cut Part 507

- Troubleshooting 509**
 - Error Messages 509
 - Emergency Error Codes 542
 - Error Numbers From the Axis or Spindle Controller 542
 - Troubleshooting Checklist RS-232 Communications 545
 - If no communications occur: 545
 - Troubleshooting Charts 548

- Service Programs..... 593**
 - Tool Offsets for the Service Programs..... 593

TA,2 Programs	593
05801-45 Deg Test	593
05802-X Resolver Test	594
05803-Y Resolver Test	594
05804-Z Resolver Test	594
05805-Work Toolchanger	594
05806-Scrape Z Head	596
05807-X Vibration	596
05808-Y Vibration	597
05809-Z Vibration	597
05810-Orientation	598
05811-Balance Inch: 595, Metric 700ipm: 302	598
05812-X Balance 680	599
05813-Y Balance 680	599
05814-Z Balance 680	600
05815-A or B 680 Balance	600
05817-Spin Fwd Rev	601
05818-Workout 2216	601
05819-Workout 4020	603
05820-Workout 6030	606
05821- X Calib 2216	608
05822 -Y Calib 2216	609
05823-X Calib 4020	609
05824 — Y Calib 4020	610
05825 — X Calib 6030	610
05826-Y Calib 6030	611
05828-Scrape 6030 Table	612
05829 — Mill 6030 Table	613
05830-Scrape 4020 Table	613
05831-Mill 4020 Table	615
05832-Scrape 2216 Table	615
05833-Mill VMC 2216	616
05834-Scrape 20 Table	617
05835-Test Scales	618
05836-Test Cut	619
05837-Probe Cycle Test	621
05838-Spindle Break In	622
05839-Pallet Changer	623
05840-Mill Pallet Table	626
05841-Mill Pallet Slot .687-.689	627
05842-Engrave Pallet A	627
05843 — Center Bearing Assy.	627
05844-Mill VMC 20	628
05845-Mill VMC 15	629
06000-Rigid Tap Cycle	629

TA,5 Programs 630

 05827-Cycle Test 630

 6001-Ballbar Test 637

Fuses, Heaters, Parameters 639

 Machine Parameters 645

 Machine Parameters: Page One 646

 FORMAT 646

 BAUD RATE 646

 SPINDLE AFTER M6 646

 AXES: X,Y,Z 647

 TRAVEL 647

 PENDANT 647

 DEFAULT: G0 648

 A-AXIS RATIO 648

 M60/A-AXIS BRAKE 648

 DEFAULT: G90 648

 B-AXIS RATIO 649

 M62/B-AXIS BRAKE 649

 DEFAULT: G17 649

 TOOL CHANGER 649

 IMM. FIXED CYCLE 650

 RPM FACTOR 650

 SPINDLE TYPE 650

 ORIENTATION FACTOR 651

 Machine Parameters: Page Two 651

 DEFAULT: INCH 651

 M7-FLOOD M8-MIST 651

 3 PHASE NO 5% LOW: NO 651

 PU FORMAT 652

 N-WORDS ORDERED 652

 TOOL TABLE 652

 CRC MODE 652

 BINARY BUFFERS: 255 653

 HIGH TORQUE 653

 SPINDLE OFF 653

 TURRET FACTOR 653

 CMD MENU 653

 PALLET 654

 GAIN 654

 RAMP 654

 ASPECT 654

 TIMERS 654

 OVERLOAD 655

 Machine Parameters: Page Three 655

SCREW	655
IPM	655
XYZ RAMP	655
Z TAP GAIN	656
VECTOR	656
AXIS DISPLAY	656
AUTO BRAKE	656
A-PALLET	657
B-PALLET	657
5TH AXIS HEAD	657
GO DETAIL	657
AIR VALVE FEEDBACK	658
AT SPEED	658
SLIDE HOLD	658
MANUAL	658
Typical TRM Parameters	659
15" (SHARP) LCD display	659
INDEX	661