
Index

A

Alternate NOEDIT Feature.....	13
AU COMMAND	68
Using the AU Command.....	68
Auto Startup Program.....	7
Automatic Cold Start.....	5
Last Home Position	5
Axis Load Display.....	14

B

Backlash.....	69
BL COMMAND	69
Using	69
Block Skip Switch.....	11

C

CD COMMAND.....	71
Setting Baud Rate Using the CD.....	71
CH COMMAND.....	72
Change Program Lines	72
CNC 88HS GRAPHICS MENU	113
CO COMMAND.....	75
Copy Program Blocks	75
Cold Start.....	75
Commands	65
AU COMMAND.....	68
Using	68
BL COMMAND	69
Using	69
CD COMMAND.....	71
Setting Baud Rate.....	71
CH COMMAND.....	72
Change Program Lines	72
CO COMMAND	75
Copy Program Blocks.....	75
CS COMMAND.....	75, 97
Cold Start	75
Establish Position	97
Establishing Part Home	97

Using Edge Finder	97
Using Indicator	98
DE COMMAND	76
Delete Program Lines	76
DNC COMMAND	76
Direct Numerical Control	76
Using a Server Program	77
FO COMMAND	78
Changing the Fixture Offset Information	81
Viewing the Fixture Offset Table	80
IN COMMAND	81
Insert Program Lines	81
LE COMMAND	83
Learn Mode	83
LI COMMAND	85
List Program	85
MD COMMAND	86
Manual Data Input	86
ME COMMAND	87
Memory Free	87
NE COMMAND	87
Memory Clear	87
NU COMMAND	88
Number Program Lines	88
PA COMMAND	88
Uses	88
Background Edit	89
Change a Line	92
Delete a Line	92
Direct Mid-Program Start	93
Insert Between Lines	90
List The Program	90
Program Editing	88
Decimals and Signs	88
Run a Single Line From the Program	92
Search The Program	91
PR COMMAND	93
Program Library	93
Program Library Menu	94
RI COMMAND	95
Memory Clear	95
SETH COMMAND	99
Home Position Correction	99
SETP COMMAND	96
Using	96

SETTO COMMAND	96
Establish Tool Order	96
SL COMMAND	99
Setting	101
Tool Length Offset	101
Purpose and Use in Program	101
Tool Length Offset	99
Setting	99
SP COMMAND	102
Save Parameters	102
SU COMMAND	102
Sum Program	102
TA COMMAND	105
Adding a Program to the End of the Program in Memory	107
Input from a Tape Punch or Computer	105
Output to Tape Punch or Computer	107
TC,1 COMMAND	108
Tool Changer Crash	108
Turret Loading	109
Turret Open for Loading	108
TO COMMAND	110
Tool Diameter Input	110
View the Tool Table	110
Use Summary	66
UT COMMAND	110
Clear the Tool Table	111
Establish Tool Order	111
Setting Tool Length Offsets	110
Utility Option	110
Viewing Error Messages	68
VT COMMAND	113
Verify Punched Tape	113
Coolant	63
Coolant 1 and Coolant 2 Buttons	63
Through Spindle	63
CS COMMAND	75
Cold Start	75
Establish Position	97
Establishing Part Home	97
Using an Indicator	98
D	
DE COMMAND	76
Delete Program Lines	76
Delete Key	18

Using	18
Direct Numerical Control	76
DNC COMMAND	76
Direct Numerical Control.....	76
E	
edge finder	97
Edit Menu	16
Emergency Stop	37
F	
Fixture Offsets	78
FO COMMAND.....	78
Changing the Fixture Offset Information.....	81
Fixture Offsets.....	78
Viewing the Fixture Offset Table.....	80
Formats	39
Changing Parameters	40
Parameter Settings.....	41
Format 1	41
Format 2	42
Saving Parameters	40
Style Programming.....	46
Format 1	46
Format 2	49
Functions Menu	16
I	
IN COMMAND	81
Insert Program Lines.....	81
indicator	98
J	
Jog Mode	21
Keyboard	22
Manual Pulse Generator	21
Remote Manual Pulse Generator.....	22
Single Step.....	24
Slide Hold.....	25
Vector Jog for 5 Axis Head	23
Waiting Stage	26
K	
Keylock	12

L

Large Format Display.....	15
LE COMMAND.....	83
Learn Mode.....	83
learn mode.....	83
LI COMMAND	85
List Program	85

M

Manual Cold Start.....	5
Manual Data Input.....	86
Manual Data Input Display.....	15
MD COMMAND	86
Manual Data Input	86
ME COMMAND.....	87
Memory Free	87
Memory Clear	87, 95
Memory Free	87
Modes	15
Command Mode	15
Cursor.....	17
MANUAL Key	17
Using	16
List Mode.....	15
Menu Mode.....	19
Using	19

N

NE COMMAND	87
Memory Clear	87
NU COMMAND.....	88
Number Program Lines.....	88

O

Optional Stop Switch	11
----------------------------	----

P

PA COMMAND	88
Background Edit	89
Change a Line	92
Direct Mid-Program Start	93
Insert Between Lines	90
List The Program	90
Program Editing.....	88
Run a Single Line From the Program	92
Search The Program	91

Uses	88
physical limits	6
Plotting Options	114
AUTO	114
CLEAR	114
FULL TABLE	114
OPTIONS PLOTTING	114
SINGLE STEP	115
TOGGLE DISPLAY MODE	114
VIEW TOP OR ISOMETRIC	115
ZOOM	115
Positioning Read Out Display	13
How To	14
Power Off	9
battery backed memory board	9
Power On	4
PR COMMAND	93
Program Library Menu	94
Pre-Startup Checks	3
Air Pressure Gauges	3
Coolant Level	3
Oil Levels	3
Power on the VMC	4
Spindle Cooler Reservoir	4
program library	93
Q	
Quick Keys Menu	16
R	
RI COMMAND	95
Memory Clear	95
Run Mode	29
Auto Running a Program	29
Changing Modes	30
Dry Run	32
Manual Pulse Dry Run	31
Mid-Tape Start	34
Single Step	33
Slide Hold	34
Waiting	30
S	
SETH COMMAND	99
Home Position Correction	99
SETP COMMAND	96

Using	96
SETTO COMMAND	96
Establish Tool Order	96
SL COMMAND	99
Setting	99
Tool Length Offset	101
Purpose and Use in Program	101
Tool Length Offset	99
Setting	99
Software ID Number	50
Viewing	50
SP COMMAND	102
Save Parameters	102
Spindle	53
Loading a Holder from the ATC	55
Manual Operations	53
ON/OFF Button	55
Orient	56
Reversed While Using Jog	57
RPM Established from MDI	54
Unorient to Turn by Hand	55
SU COMMAND	102
Sum Program	102
T	
TA COMMAND	105
Adding a Program to the End of the Program in Memory	107
Input from a Tape Punch or Computer	105
Output to Tape Punch or Computer	107
TC,1 COMMAND	108
Tool Changer Crash	108
Turret Loading	109
Turret Open for Loading	108
TO COMMAND	110
Tool Diameter Input	110
View the Tool Table	110
Tool Changer	59
Crash	59
Establish Tool Order	61
Open for Loading	59
Turret Loading	60
Using the SETTO Command	61
Tool Changer Crash	108
Tool Diameter Input	110

U

UT COMMAND	110
Clear the Tool Table	111
Utility Option	110

V

Video ON/OFF Switch	11
VT COMMAND	113
Verify Punched Tape	113

W

Wrong Power Off	6
Last Home Position	7
last home position	7