

# Table of Contents

**Table of Contents ..... i**

**Summary ..... 1**

- NC Word Summary ..... 1
- G Codes ..... 2
- Default Status ..... 5
- M Functions ..... 6
- Program Tape Input ..... 9
- Program Numbers, Protection & Storage ..... 10
- Program Protection ..... 11
- Format Classification Sheet ..... 14

**M Functions ..... 21**

- M0 Program Stop ..... 21
- M1 Optional Program Stop ..... 22
- M2 End of Program (Format 1) ..... 22
- M2 End of Program (Format 2) ..... 22
- M3 Spindle CW ..... 23
- M3.1 Sub-Spindle On, Ignore Magnet ..... 23
- M3.2 Acknowledge Spindle Magnet ..... 23
- M4 Spindle CCW ..... 24
- M4.1 Sub-Spindle On, Ignore Magnet ..... 24
- M4.2 Acknowledge Spindle Magnet ..... 24
- M5 Spindle Off ..... 24
- M6 Tool Change ..... 25
- M7 Coolant One On ..... 26
- M7.1 Programmable Coolant On ..... 27
- M8 Coolant Two On ..... 27
- M8.1 Programmable Coolant On ..... 27
- M9 Coolant Off ..... 28
- M10 Cancel Reciprocation ..... 28
- M11 X Axis Reciprocation ..... 28
- M12-M16 Reciprocation for Y, Z, B, A ..... 29
- M17 End of Subroutine ..... 29
- M18 Air Ratcheting Indexer ..... 30
- M19 Spindle Stop and Orient ..... 31
- M20 General Purpose Indexer ..... 31

M30 End Of All Subroutines (Formats 1&2) ..... 31

M30 End Of Program (Format 2) ..... 32

M31 Exchange Pallets ..... 32

M32 Load and Store Pallet A ..... 33

M32.1 Load Pallet A & Verify Pallet A Has Been Loaded ..... 33

M33 Store and Load Pallet B ..... 33

M 33.1 Load Pallet B & Verify Pallet B Has Been Loaded ..... 34

M41-M43 Belt Drive Range ..... 34

M45 Execute Fixed Cycle ..... 34

M46 Positive Approach ..... 35

M47 Cancel Positive Approach ..... 35

M48 Potentiometer Controls In ..... 35

M49 Potentiometer Controls Out ..... 36

M48.1 & M49.1 Servo Coolant Potentiometer Controls In/Out ..... 36

M48.2 & M49.2 Pallet A Rotary Table Override Potentiometer ..... 36

M48.3 & M49.3 Pallet B Rotary Table Override Potentiometer ..... 37

M60 - M69 User Attached Devices ..... 37

M80 Automatic Doors Open ..... 38

M81 Automatic Doors Close ..... 38

M90-M93 Gain Setting ..... 38

M94 Feed Forward Function ..... 39

M94.1 Feed Forward by Feed Rate Modification ..... 40

M94.2 Advanced Feed Forward ..... 42

M95 Feed Forward Cancel ..... 44

M95.1 Feed Forward by Feed Rate Modification Cancel ..... 44

M95.2 AFF Cancel ..... 44

M96 Intersectional Cutter Compensation Canceled (Roll CRC) ..... 44

M97 Intersectional Cutter Compensation ..... 45

M98 Subprogram (Formats 1 & 2) ..... 45

M99 End Of Subprogram (Formats 1 & 2) ..... 46

M99 Line Jump (Formats 1 & 2) ..... 46

**G Codes .....47**

G0 Rapid Travel ..... 47

G1 Linear Interpolation ..... 48

G2 Circular Interpolation Arc Clockwise ..... 48

G3 Circular Interpolation Arc Counterclockwise ..... 48

G4 Dwell ..... 48

G5 Non Modal Rapid ..... 49

G8 Acceleration (No Feed Ramps) ..... 49

G9 Deceleration (Feed Ramps) ..... 50

G10 Programmable Data Input ..... 51

G15 YZ Circular Interpolation With The A Axis ..... 54

G17-G19 Plane Selection ..... 54

G17.1-G17.2 A/B Word Swap.....	55
G20 Inch Programming .....	55
G21 Metric Programming .....	55
G28 Return to Zero .....	55
G28.1 Cancel JOG AWAY .....	56
G29 Return from Zero .....	56
G31 Probe Touch Function .....	57
Storing Probed Positions .....	58
G31.1 Probe No Touch Function .....	59
G40 Cutter Compensation Cancel .....	59
G41 Cutter Compensation Left .....	59
G42 Cutter Compensation Right .....	59
G43 Tool Length Compensation Positive .....	59
G44 Tool Length Compensation Negative .....	59
G45 Tool Offset Single Expansion .....	60
G46 Tool Offset Single Reduction .....	61
G47 Tool Offset Double Expansion .....	61
G48 Tool Offset Double Reduction .....	61
G49 Tool Length Offset Cancel .....	61
G50 Ramp Control Cancel .....	62
G50.1 Mirror Image Cancel .....	62
G51 Ramp Control .....	62
G51.1 Mirror Image .....	63
G51.2 Tool Load Compensation (TLC) .....	64
Canceling G51.2 (TLC) .....	65
TLC Manual Target Power Override .....	65
G51.3 Axis Scaling .....	65
G52 Coordinate System Shift .....	66
G53 Machine Coordinate System .....	67
G54-G59 Fixture Offsets .....	68
G66 Modal Subroutine .....	68
G67 Cancel Modal Subroutine .....	70
G68 Coordinate System Rotation .....	70
G69 Coordinate System Rotation Cancel .....	71
G70 Inch Programming .....	71
G71 Metric Programming .....	71
G73-G76, G81-G89 Fixed Cycles .....	71
G80 Fixed Cycle Cancel .....	71
G90 Absolute Input .....	72
G91 Incremental Input .....	72
G91.1 High Speed Execution .....	73
G91.2 High Speed Execution Cancel (Format 2 Only) .....	73
G92 Absolute Preset .....	73
G93 I/T (Inverse Time) Feed Rate Specification (IPM/inches, DPM/degrees) .....	74
G94 Feed Rate Specification MPPM, IPM or DPM .....	74

G98 Return to Initial Plane .....	74
<b>Fixed Cycles .....</b>	<b>75</b>
Definition .....	75
Procedure to Initialize a Fixed Cycle .....	75
I Plane .....	75
R Plane .....	76
G 98 Return to I Plane after Final Z .....	76
G99 Return to R0 Plane after Final Z .....	76
Cycle Execution .....	76
Fixed Cycle Parameters .....	77
Tapping Cycles .....	96
<b>Subroutines &amp; Subprograms .....</b>	<b>103</b>
Subroutines.....	103
Beginning a Subroutine .....	103
Calling a Subroutine .....	103
Ending a Subroutine .....	104
Main Program .....	104
Nesting .....	105
Parametric Programming .....	107
Indefinite Subroutine Repetitions .....	108
Subprograms .....	108
<b>Fixed Subroutines .....</b>	<b>111</b>
Definition .....	111
Engraving .....	111
Bolt Circle .....	118
Mill Boring .....	119
Rectangular Pocket Clean-out .....	121
Circular Pocket Clean-out .....	124
<b>Keyboard .....</b>	<b>127</b>
Key Lock Switch           (Edit Protection) .....	127
Block Skip Switch .....	127
Optional Stop Switch .....	127
Light On/Off Switch .....	127
Video On/Off Switch .....	127
Rapid Travel Selector .....	128
Feed Rate Override Potentiometer .....	128
Spindle Speed Override Potentiometer .....	129
Jog Key and the Hand Wheel .....	129
Shift .....	129

- Enter ..... 130
- Delete ..... 130
- Backspace ..... 130
- Spindle On/Off ..... 130
- Auto ..... 131
- Slide Hold ..... 132
- Slide Hold, JOG AWAY ..... 132
- External Slide Hold ..... 133
- Spacebar, Background Editing ..... 134
- Single Step ..... 135
- Start ..... 135
- Emergency Stop ..... 136
- Manual ..... 136
- Coolant-1 (FLOOD) ..... 136
- Coolant-2 (MIST) ..... 136
- Turret CW ..... 136
- Turret CCW ..... 136

**Commands ..... 137**

- Auto ..... 138
- Backlash ..... 139
- Change Device ..... 139
- Change Program ..... 140
- Command Lock ..... 141
- Copy Program ..... 143
- Cold Start ..... 143
- Display Bucket # ..... 144
- Delete Blocks ..... 144
- Display Feed Forward Parameters ..... 144
- Display Fixture Offsets ..... 146
- Diagnostics ..... 146
- Direct Numerical Control ..... 146
- XModem Direct Numerical Control ..... 147
- Draw ..... 147
- Display Tool Table ..... 149
- Display Tool Time Table ..... 150
- Display Variable Table Command ..... 151
- Fixture Offset ..... 151
- Home Axis ..... 152
- Insert Blocks ..... 153
- Jog Axis ..... 153
- Learn Mode ..... 153
- List Program ..... 154
- Macro ..... 154

Manual Data Input .....	154
Memory .....	155
Menu .....	155
New Program .....	155
Renumber Program .....	156
Program Page Edit .....	156
Function Menu .....	157
Graphics Menu .....	158
Background Editing .....	158
Dry Run Options .....	158
Offsets .....	159
Help .....	160
Program Maintenance Library .....	161
Punch Program Tape .....	161
Reinitialize .....	163
Set Cold Start .....	163
Set Home Position Of All Axes .....	163
Set Home Position For One Axis .....	164
Metric Programming .....	164
Inch Programming .....	164
Set System Parameters .....	164
Pallet Programming.....	165
Programming Formats .....	165
Operation Formats .....	169
AXES:X,Y,Z .....	169
DEFAULT: G0 .....	170
DEFAULT: G90 .....	170
DEFAULT: G17 .....	171
RPM FACTOR .....	171
BAUD RATE: 2400 .....	172
TRAVEL .....	172
Tool Changer Cap .....	173
Timers .....	173
Spindle Type .....	174
Spindle After M6 .....	174
Pendant .....	175
Imm. Fixed Cycle .....	175
Orientation Factor .....	176
DEFAULT: INCH .....	176
PU FORMAT .....	177
CRC Mode .....	177
Pallet .....	178
M7-FLOOD, M8-MIST .....	178
Binary Buffers 255 .....	179
Turret Factor .....	180

Gain .....	181
3 Phase 5% Low: No .....	181
High Torque/Rigid Tap .....	182
CMD Menu .....	182
Ramp .....	183
A-Axis Ratio .....	183
B-Axis Ratio .....	184
M60/A-Axis Brake .....	184
M62/B-Axis Brake .....	185
N-Words Ordered .....	185
Tool Table .....	186
Set Turret Order .....	186
Set Tool Length Offset .....	187
Sum Program .....	188
Survey .....	189
Tape (Program) Input .....	190
Tool Changer Open .....	191
Tool Parameter Definition .....	191
Tool Loading Procedure .....	192
Utility .....	192
Tape Verification .....	202
<b>Cutter Radius Compensation .....</b>	<b>203</b>
Cutter Radius Compensation .....	203
G40 - Cancel Cutter Radius Compensation .....	204
G41 - Climb Cut (cutter left) .....	204
G42 - Conventional Cut (cutter right) .....	204
Climb and Conventional Cutting .....	205
The H and the D Word with CRC .....	206
Advantages of Climb Cutting .....	206
Guidelines for Using CRC .....	208
General Rules .....	209
O-Ring Groove Example .....	214
Perpendicular Rule .....	215
Fillet Radii and Step Downs .....	216
Corner Rounding .....	218
M96 Cancel Intersectional CRC (Rolling) .....	219
M97 Intersectional CRC .....	219
When to use M96 and M97 .....	219
CRC & Z Axis Moves .....	220
Applying Compensation with a Z Move .....	221
Applying Compensation with a Z Move on a Circle .....	223

---

<b>Error Messages .....</b>	<b>225</b>
Error Messages .....	225
Axis/Spindle Controller Error Messages .....	256
<b>Coordinate Systems .....</b>	<b>261</b>
Machine Coordinate System .....	261
Tooling Coordinate System - Home .....	261
Fixture Offsets .....	261
Program Coordinate System .....	263
<b>Rotary Axes .....</b>	<b>265</b>
A Axis .....	265
Tilt Rotary Table .....	283
<b>Interpolation .....</b>	<b>287</b>
VMC Interpolation Modes .....	287
Arc Center .....	290
Arc Direction .....	291
Circle Examples .....	291
Circular Interpolation Using Radius Designation .....	301
Helical Interpolation .....	302
Repeating Helical Moves .....	302
Cutter Radius Compensation with Helical Moves .....	306
Partial Arcs and Helical Moves .....	307
Thread Milling .....	307
<b>Communications .....</b>	<b>311</b>
Communications .....	311
Commands .....	315
VMC Communications Procedures .....	322
Device Communications Procedures .....	324
Tape Punch / Teletype .....	325
<b>Touch Probes .....</b>	<b>339</b>
Touch Probes .....	339
Probe Offsets .....	342
Set Touch Point .....	368
Probe Tutorial .....	369
Using the Probe with Macro Statements .....	371
Fixed Subroutines .....	375



- Command Menus ..... 379**
  - Quick Keys Menu ..... 379
  - Edit Menu ..... 382
  - Function Menu ..... 384
  
- Pallet Changer ..... 391**
  - Mechanical Overview ..... 391
  - G17.1 - G17.2 A/B Word Swap ..... 391
  - M31 Exchange Pallets ..... 392
  - M32 Store Pallet B and Load Pallet A ..... 392
  - M32.1 Store Pallet B & Load Pallet A & Verify Pallet A has been Loaded ..... 392
  - M33 Store Pallet A and Load Pallet B ..... 392
  - M33.1 Store Pallet A & Load Pallet B & Verify Pallet B has been Loaded ..... 393
  - Pallet A Rotary Table & Pallet B Rotary Table Override Potentiometer ..... 393
  - M48.2 Pallet A Rotary Table Override Potentiometer Enable ..... 394
  - M49.2 Pallet A Rotary Table Override Potentiometer Disable ..... 394
  - M48.3 Pallet B Rotary Table Override Potentiometer Enable ..... 394
  - M49.3 Pallet B Rotary Table Override Potentiometer Disable ..... 394
  - Remote Machine Control ..... 395
  - Utility Menu ..... 395
  
- Macros ..... 401**
  - Macros and Parametric Programming ..... 401
  - Mathematical Functions ..... 406
  - Variables ..... 408
  - Functions ..... 415
  - Macro Commands ..... 417
  - Macro Tutorial ..... 424
  - Variables ..... 425
  - Operator Interaction ..... 427
  - Program Branching ..... 428
  - AND, OR, and NOT ..... 430
  - FADAL Macro Language Examples ..... 432
  - Tutorial Program Summaries ..... 440
  - Tutorial Program Explanations ..... 442
  - Tutorial Program Listings ..... 458
  
- Miscellaneous ..... 465**
  - Flood Coolant Through the Spindle (Optional) ..... 465
  - Hydro Sweep (Optional) ..... 466
  - Automatic Doors (Optional) ..... 467
  - Servo Coolant (Optional) ..... 468
  - Chip Auger and Wash Down (Optional) ..... 472

Dual Arm Tool Changer .....	475
Miscellaneous Control Options .....	477
Analyzer Software .....	479
CNC88 HS Optional Diskette Drive .....	481
<b>Graphics .....</b>	<b>485</b>
CNC 88HS Graphics .....	485
Function Menu .....	487
The Function Menu Display .....	492
<b>Formats .....</b>	<b>511</b>
Overview .....	511
Format 1 Programming .....	511
Format 2 Programming .....	514
Default Parameters, SETP Command .....	516
Parameters Applicable to FORMAT 2 Only .....	530
<b>Operation of the TRM .....</b>	<b>531</b>
Introduction .....	531
<b>Index .....</b>	<b>1</b>